

Processing Bioplastics. Sustainable Compounding with Coperion Technology.







>> Bioplastics are biodegradable, bio-based, or both. They represent a market-ready solution and are already in use in a variety of applications.

Bioplastics manufacturing places very high demands upon the compounding process due to the number of possible base polymers and the vast differences in recipe mixtures. Every process step in the compounding systems must be precisely aligned with the mechanical properties required in the end product. Coperion and Coperion K-Tron have decades of experience in realizing systems for bioplastics manufacturing. We possess unique process expertise and comprehensive system knowhow for the entire process chain – from raw material conveying to premixing, feeding, extrusion, pelletizing and drying, as well as the gentle conveying of biocompounds. As a result, you profit from our in-depth knowledge, acquired in the fields of plastics compounding and cooking extrusion.

TYPICAL APPLICATIONS FOR COPERION SYSTEMS

- > Starch-based bioplastics
- >Thermoplastic starch (TPS)
- >Compounds made of various biopolymers such as PLA, PVOH, PBS, PBAT, PHA, PCL, CA






Everyday life without plastics has become unthinkable. The vast majority of plastics used today incorporate fossil-based resources. However, bio-based plastics from renewable raw materials are a viable forward-looking alternative.

Primarily sugar, starch, proteins, cellulose, lignin, fats or oils harvested from plants such as corn, sugarcane, sugar beets or lumber are used as source materials for manufacturing bio-based plastics.

Compared to the use of fossil-based resources, renewable raw materials lead to a reduced carbon footprint and increased sustainability of the plastic products. Fewer fossilized hydrocarbons are used, resulting in less multimillion-year-old CO_2 being released into the atmosphere. Moreover, it promotes independence from increasingly scarce and costly fossil-based resources. Bio-based plastics can be comprised entirely or partially of sustainable raw materials. They can be biodegradable, though some are only partially so. Conversely, biodegradable plastics are not necessarily bio-based.

At Coperion, we have made it our goal to support the plastics industry on its path to a circular economy with our BlueValue process solutions – for a sustainable future.

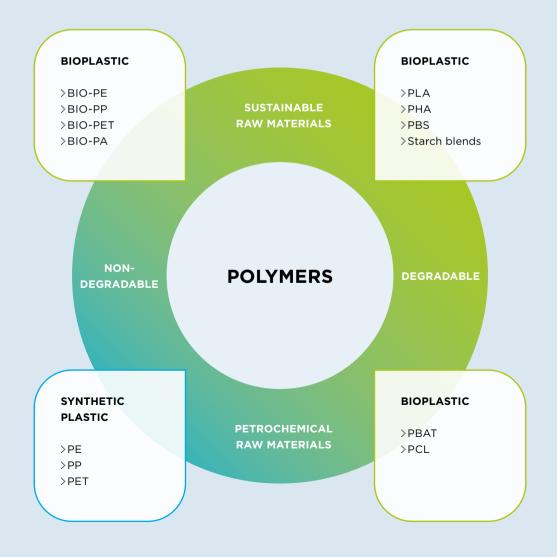

>> Our products.

> FEEDING








For free-flowing bulk materials, our single screw feeders and bulk solids pumps are ideal solutions. For ingredients with poor flow properties, we recommend our twin screw feeders, which can be equipped with flow aids such as ActiFlow™ technology when needed. Vibratory feeders and weigh belt feeders are well suited for flakes or fibers. For feeding liquids, we build pump systems with hanging or platform scales that

can be individually designed for any viscosity. All of our loss-in-weight feeders are equipped with Smart Force Transducer (SFT) weighing technology to ensure high-accuracy bulk material feeding, batching and metering. If space is limited, up to six feeders can be grouped around the process inlet using the K4G feeder line.

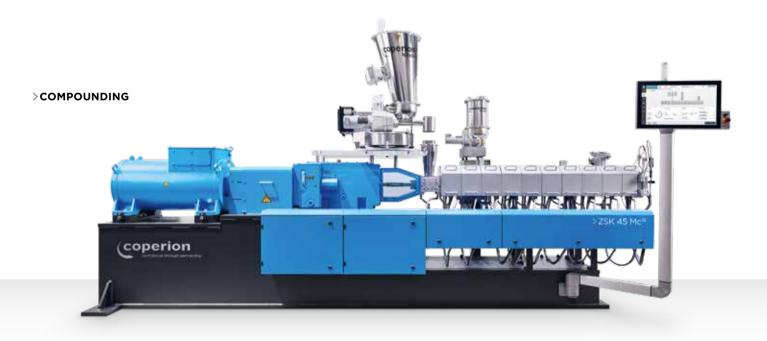

Our ZSK and STS series of twin screw extruders form the core of processing systems for bioplastics. The process section's modular design allows us to custom-tailor the design of the extruder to each process individually. Processing in the Coperion extruder features intensive dispersion and mixing performance at very low shear stress and low temperatures. The product is handled very gently in the process section with a short residence time, while at the same time achieving reliably high throughputs and highest product quality.

To obtain specific product properties, fibers, fillers, and additives can be introduced downstream into the process using side feeders. Our Feed Enhancement Technology (FET) ensures a very high intake capacity for feed-limited products with vacuum applied to the feed zone from the outside. Volatile materials are reliably removed by degassing, devolatilization domes and the ZS-EG side devolatilization, thus achieving consistently high product quality.

>BULK MATERIAL HANDLING







We offer solutions for handling the full spectrum of bulk materials in the bioplastic manufacturing process, encompassing both individual components as well as complete conveying systems. Solutions include, for example, rotary valves for material discharge from silos, bulk bins, or small bag dump stations, as well as continuous feeding into the process. Using continuous vacuum and pressure conveying systems specifically

tailored to the material, ingredients are gently transported to the feeders and twin screw extruders.


After extrusion, we take over further process steps using additional technologies, such as cooling/warming, devolatilization, cleaning/sifting or homogenization as well as conveying of the finished product.



The method used for polymer melt pelletizing depends strongly upon the product's water sensitivity. Coperion underwater and water ring pelletizers may be used, as well as air pelletizers. Alternatively, bioplastics can be cooled in a water bath and


cut using our strand pelletizers. For the automatic transfer of extruded strands from the die head to the strand pelletizer, we offer both the ASC fully Automatic Strand Conveying System as well as the semi-automatic SCP Strand Conveying System.

>> Typical processes.

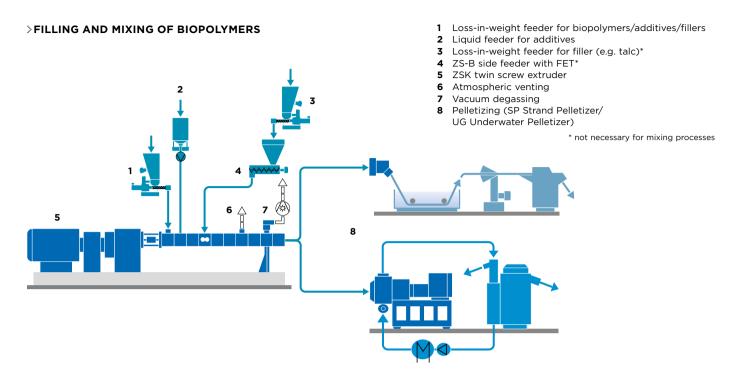


When filling and mixing biopolymers, we achieve throughputs with our systems that are comparable to those of fossil-based engineering plastics. A wide range of feeding technologies allows us to provide an optimized feeding system for any bulk material. Using patented FET technology, the extruder's intake section is equipped with a porous, gas-permeable wall

to which a vacuum is externally applied. The resulting gas vacuum markedly increases the material intake capacity and throughput when processing feed-limited products. Due to the intensive mixing and devolatilization in the extruder, very high product quality is achieved.

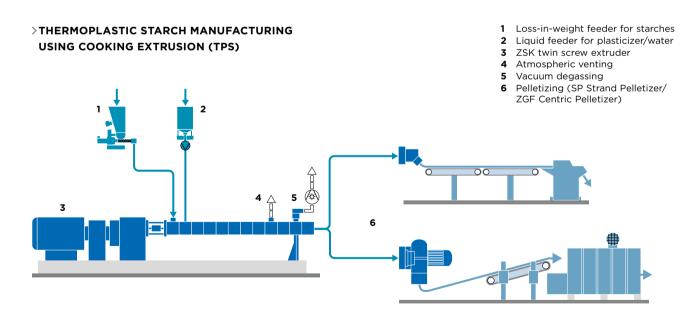

Since native starch cannot be melted using heat, it must be converted into thermoplastic starch (TPS). In this process, the starch powder (i.e. from corn, potatoes, or tapioca) is gelatinized (cooked) in the extruder. While adding liquid, heat and shearing energy, the starch's partially crystalline structure is

transformed into a completely amorphous structure. This process is irreversible. To give the TPS more flexibility, plasticizers, such as glycerin, can be added to the process. Gravimetric liquid feeders ensure that additives are added with very high accuracy, even at low feed rates.

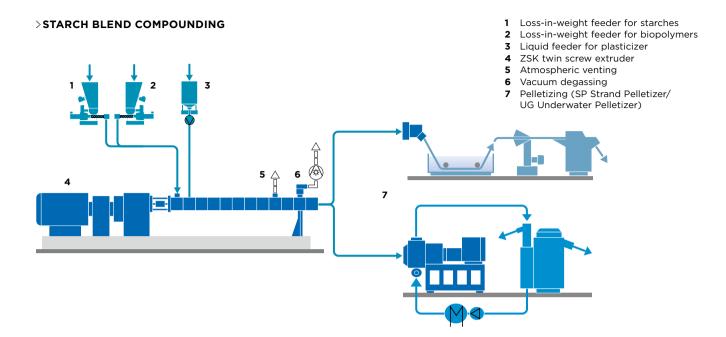

Starch blends are mixtures of thermoplastic starch (TPS) and plastics made from fossil-based or sustainable raw materials. Manufacturing of this type of bioplastic, currently comprising the largest share of all bioplastics, can be accomplished within the twin screw extruder in a single process step. The biopolymer is fed directly into the extruder along with components for TPS.

The recipes and properties of starch blends vary greatly depending upon the purpose of the end product. Using

high-accuracy feeders, raw materials are introduced into the twin screw extruder. With the smart flow aid device ActiFlow, gravimetric twin screw feeders can reliably feed even difficult-flowing starches with high accuracy. Within the ZSK extruder the raw materials are modified by means of intensive energy introduction and homogeneously mixed. The melt is reliably devolatilized and, depending upon product properties, can be processed into compounds using strand or underwater pelletizing.

Coperion GmbH

Theodorstrasse 10 70469 Stuttgart, Germany Tel.: +49 711 897-0

Fax: +49 711 897-3999

Coperion GmbH

Niederbieger Strasse 9 88250 Weingarten, Germany Tel.: +49 751 408-0 Fax: +49 751 408-200

Coperion K-Tron Salina, Inc.

606 North Front Street Salina, KS 67401, USA Tel.: +1 785 825-1611 Fax: +1 785 825-8759

Coperion K-Tron Salina, Inc. Sewell Office

590 Woodbury Glassboro Road Sewell, NJ 08080, USA Tel.: +1 856 589-0500 Fax: +1.856.589-8113

Coperion K-Tron (Schweiz) GmbH

Lenzhardweg 43/45 5702 Niederlenz, Switzerland Tel.: +41 62 885-7171 Fax: +41 62 885-7180

info@coperion.com www.coperion.com

> Furone

Belgium, Luxembourg, Netherlands

Coperion N.V.

Industrieweg 2, 2845 Niel, Belgium Tel.: +32 3 870-5100 Fax: +32 3 877-0710

France

Coperion S.a.r.l.

56 boulevard de Courcerin 77183 Croissy-Beaubourg, France Tel.: +33 164 801 600

Fax: +33 164 801 599

Germany

Coperion GmbH **Germany West Office**

Industriestrasse 71a 50389 Wesseling, Germany Tel.: +49 2232 20700-10 Fax: +49 2232 20700-11

Coperion Pelletizing Technology GmbH

Heinrich-Krumm-Strasse 6 63073 Offenbach, Germany Tel.: +49 69 989 5238-0 Fax: +49 69 989 5238-25

Coperion K-Tron Deutschland GmbH

Heinrich-Krumm-Strasse 6 63073 Offenbach, Germany Tel.: +49 69 8300 899-0 Fax: +49 69 8300 9498

Italy

Coperion S.r.l.

Via E. da Rotterdam. 25 44122 Ferrara, Italy Tel.: +39 0532 7799-11 Fax: +39 0532 7799-80

Coperion S.r.l. Milan Office

Via XXV Aprile, 49 20091 Bresso (MI), Italy Tel.: +39 02 241 049-01 Fax: +39 02 241 049-22

Russian Federation, CIS

OOO Coperion

Proezd Serebryakova 14, Bld. 15, Office 219 129343 Moscow, Russian Federation Tel: +7 499 258 4206

Fax: +7 499 258 4206

Spain, Portugal Coperion, S.L.

Balmes, 73, pral. 08007 Barcelona, Spain Tel.: +34 93 45173-37 Fax: +34 93 45175-32

United Kingdom

Coperion Ltd. Coperion K-Tron Great Britain Ltd.

Unit 4. Acorn Business Park

Heaton Lane

Stockport, SK4 1AS, United Kingdom

Tel.: +44 161 209 4810 Fax: +44 161 474 0292 > Asia

China

Coperion (Nanjing) Machinery Co. Ltd.

No. 1296 Jiyin Avenue Jiangning District Nanjing 211106, PR China Tel.: +86 25 5278 6288 Fax: +86 25 5261 1188

Coperion (Nanjing) Machinery Co. Ltd. Taiwan Branch Office

7F-2, No.201, Fuxing N. Road Songshan District Taipei City 105403, Taiwan Tel.: +886 2 2547 5267 Fax: +886 2 2547 5980

Coperion International Trading (Shanghai) Co. Ltd. **Coperion Machinery &** Systems (Shanghai) Co. Ltd.

3rd Floor, Building B1 6000 Shenzhuan Road Dongjing Town, Songjiang District Shanghai 201619, PR China Tel.: +86 21 6767 9505 Fax: +86 21 6767 9108

Coperion K-Tron (Shanghai) Co. Ltd.

3rd Floor, Building B1 6000 Shenzhuan Road Dongjing Town, Songjiang District Shanghai 201619, PR China Tel: +86 21 6767 9505 Fax: +86 21 6767 9108

Coperion Ideal Pvt. Ltd.

Ideal House, A-35, Sector 64 201307 Noida (U.P.) India Tel.: +91 120 4299 333 Fax: +91 120 4308 583

Japan

Coperion K.K.

4F, Leaf Square Shin-Yokohama Blda. 3-7-3. Shin-Yokohama. Kohoku-ku Yokohama, Kanagawa 222-0033, Japan Tel.: +81 45 595 9801 Fax: +81 45 595 9802

Saudi Arabia

Coperion Middle East Co. Ltd.

Street # 327, Sector G, Block 2, Lot # 31 Jubail 2 Industrial City, Kingdom of Saudi Arabia Tel.: +966 13 510 4420 Fax: +966 13 510 4421

Singapore

Coperion Pte. Ltd. Coperion K-Tron Asia Pte. Ltd.

8 Jurong Town Hall Road #28-01/02/03 The JTC Summit Singapore 609434

Tel.: +65 641 88-200 Fax: +65 641 88-203

> America

South America Coperion Ltda.

R. Arinos, 1000

RBCA - Royal Business Center Anhanguera, Módulo 4 Parque Industrial Anhanguera 06276-032 Osasco - SP, Brazil Tel.: +55 11 3874-2740

Fax: +55 11 3874-2757

USA Canada Mexico NAFTA

Coperion Corporation

590 Woodbury Glassboro Road Sewell, NJ 08080, USA Tel.: +1 201 327-6300

Fax: +1 201 825-6494

Coperion Corporation Wytheville Office

196 Appalachian Drive Wytheville, VA 24382, USA Tel: +1 276 228-7717 Fax: +1 276-227-7044

Coperion Corporation Houston Office

5825 North Sam Houston Pkwy West

Suite 250

Houston TX 77086 USA Tel.: +1 281 449-9944 Fax: +1 281 449-4599

For more information about the worldwide Coperion network. visit www.coperion.com



